

BRP-Rotax INSTALLATION MANUAL

Installation wiring diagram

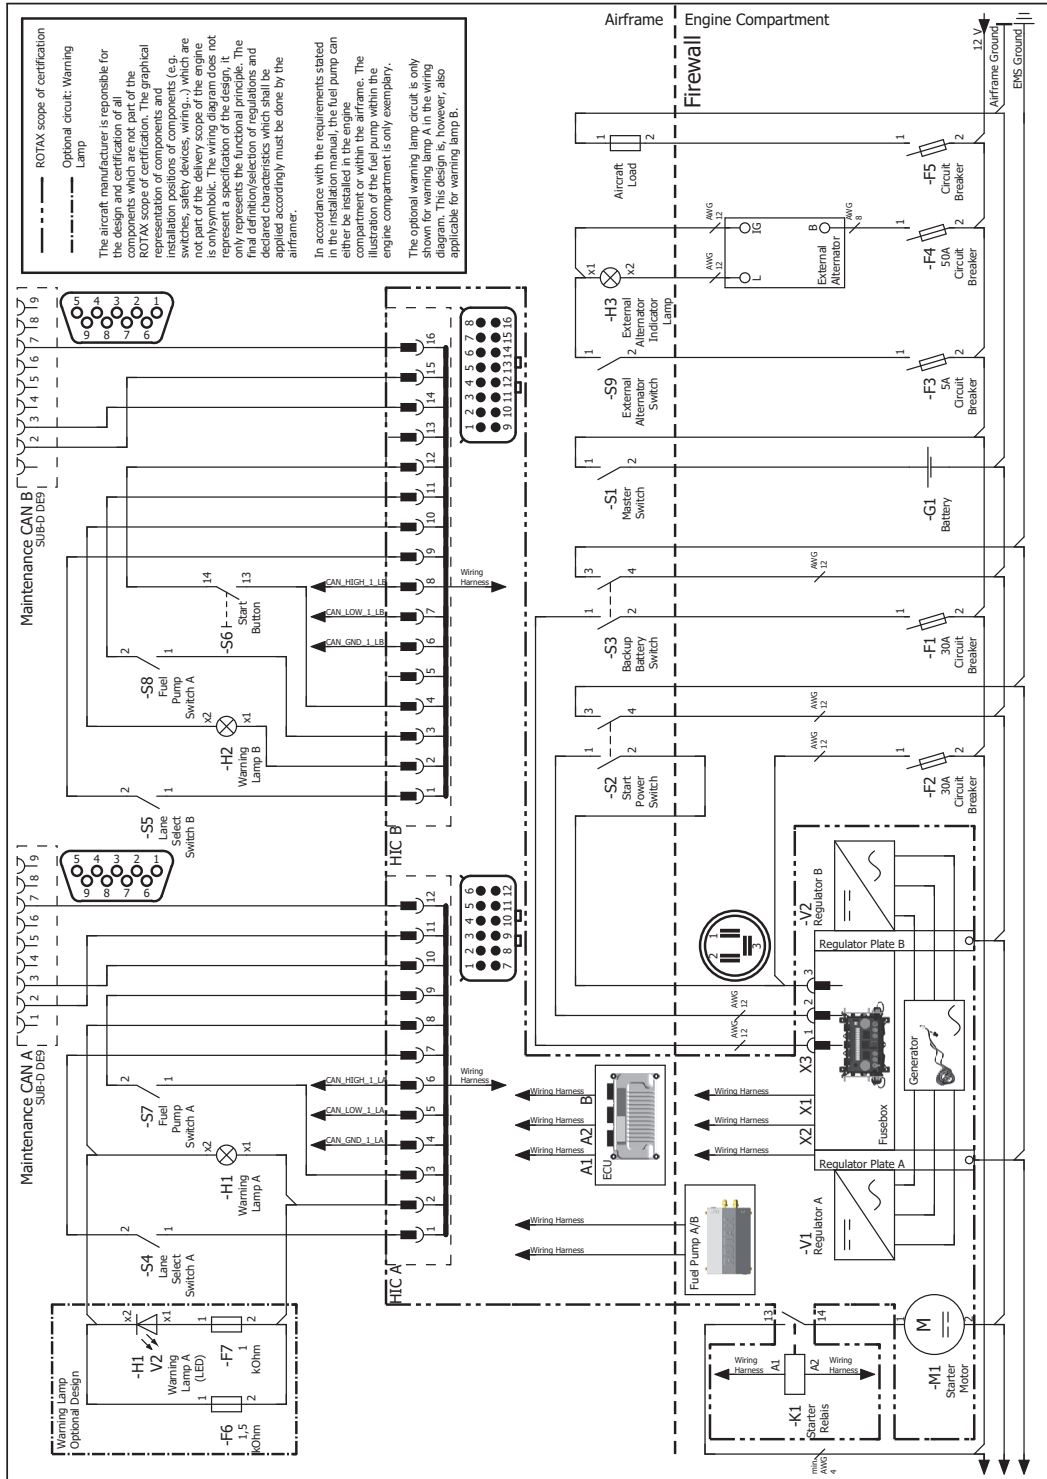


Figure 3.14