


CH601HDS N601RW: Main Wiring Diagram

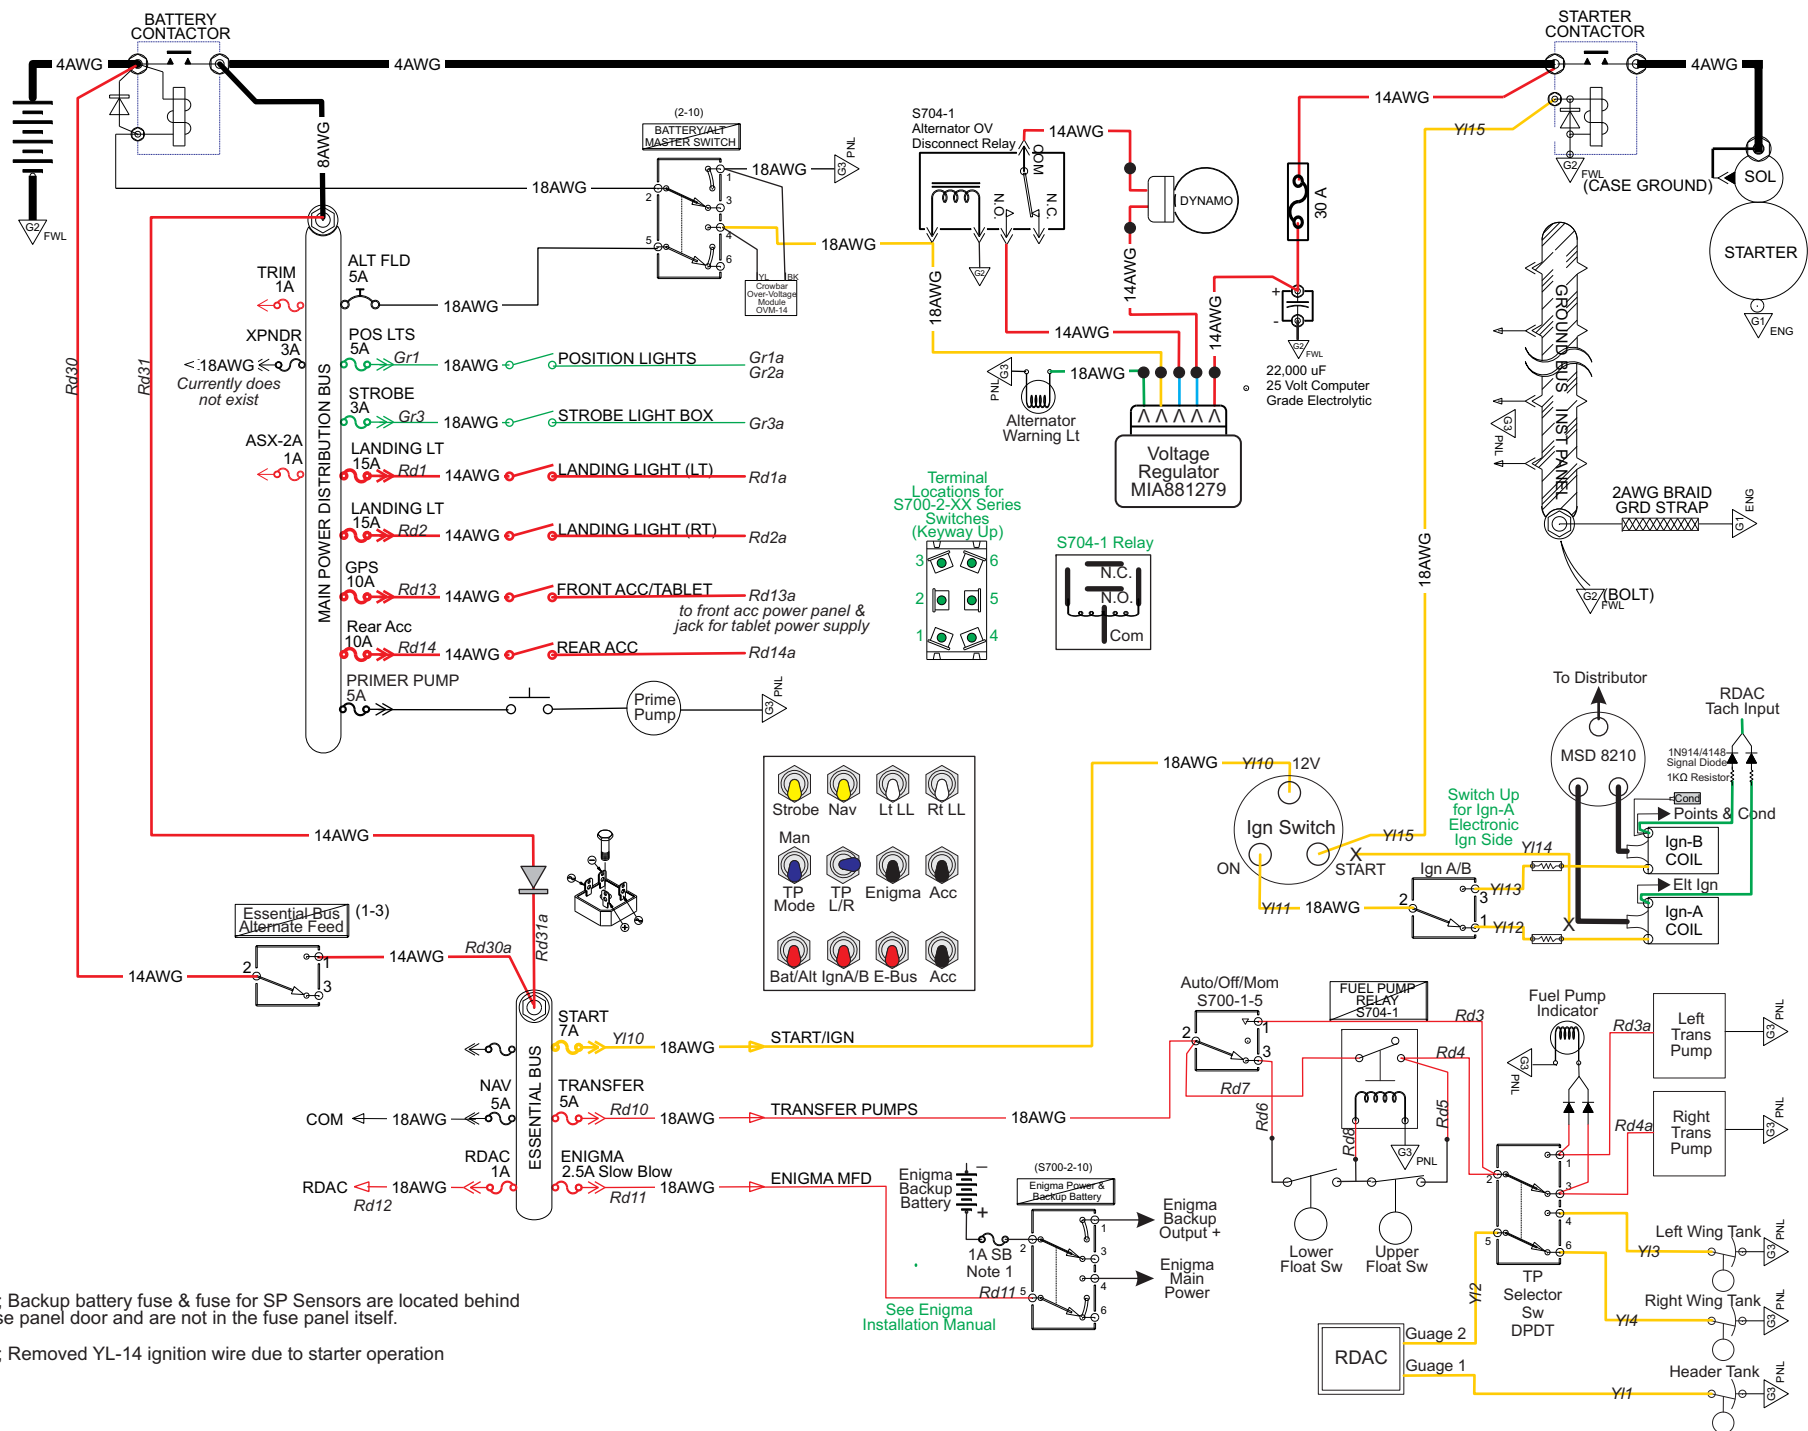

Note 1; Backup battery fuse & fuse for SP Sensors are located behind the fuse panel door and are not in the fuse panel itself.

Note 2: Removed YL-14 ignition wire due to starter operation