

BRP-Rotax INSTALLATION MANUAL

Wiring diagram

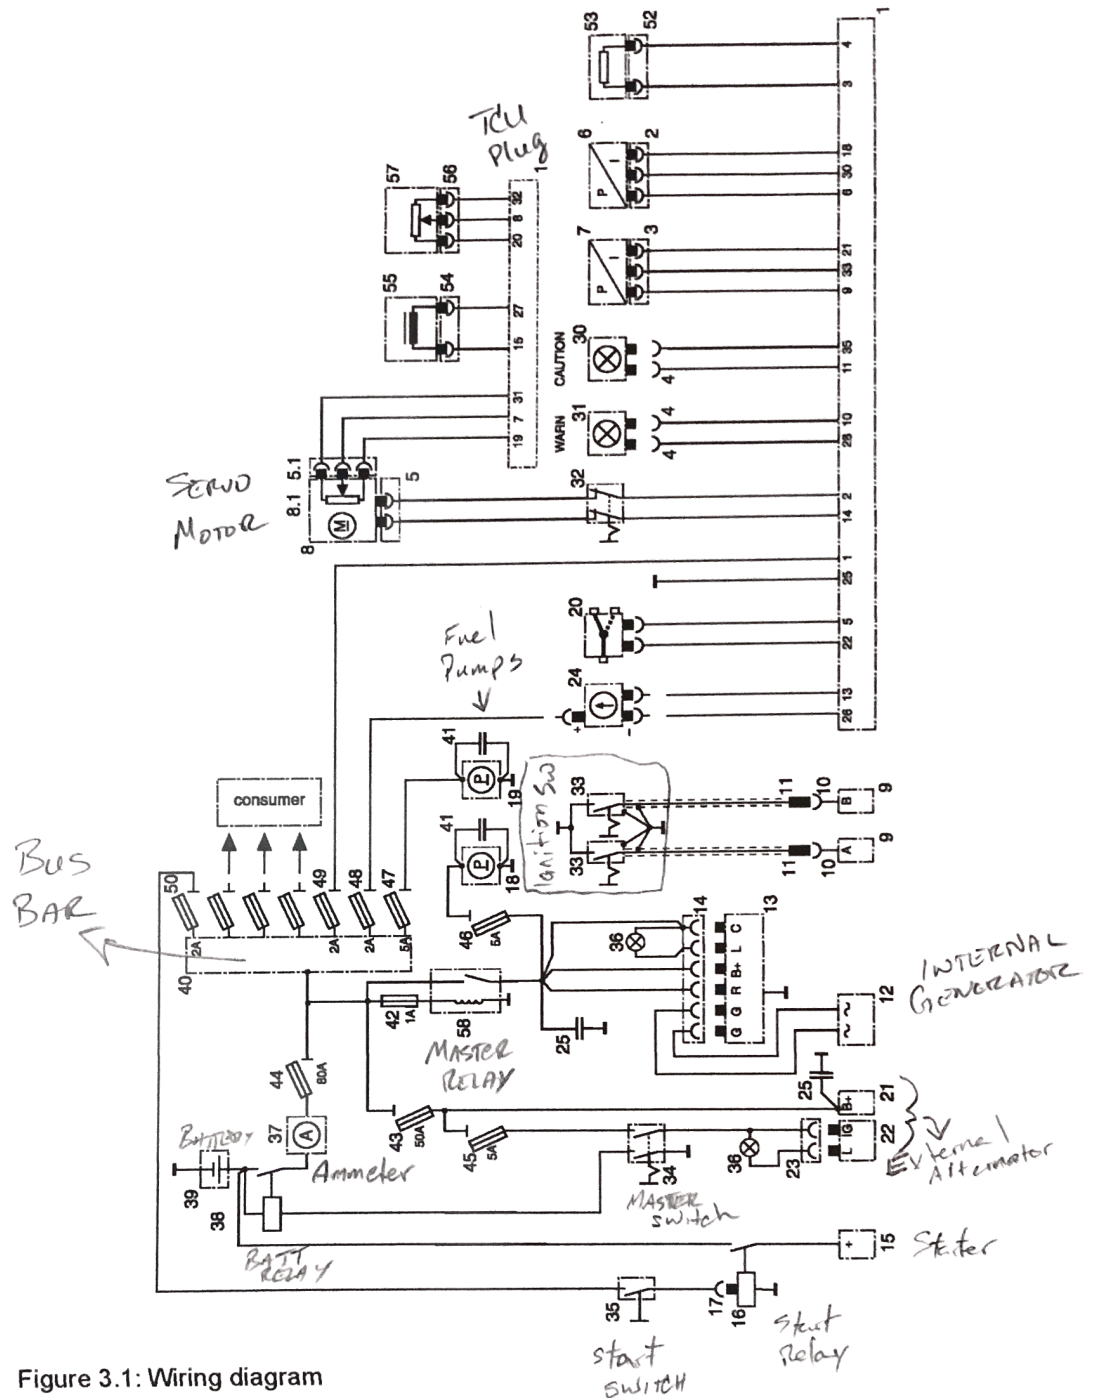


Figure 3.1: Wiring diagram

- | | |
|-----------------------------------|--|
| 1 36-pole plug receptacle for TCU | 2, 3 Plug connection for servo motor |
| 4 Plug connection for lamps | 5 Plug connection for servo motor +5.1 for potentiometer |