




Electrical Overview: sample installation diagram for UL260/UL350

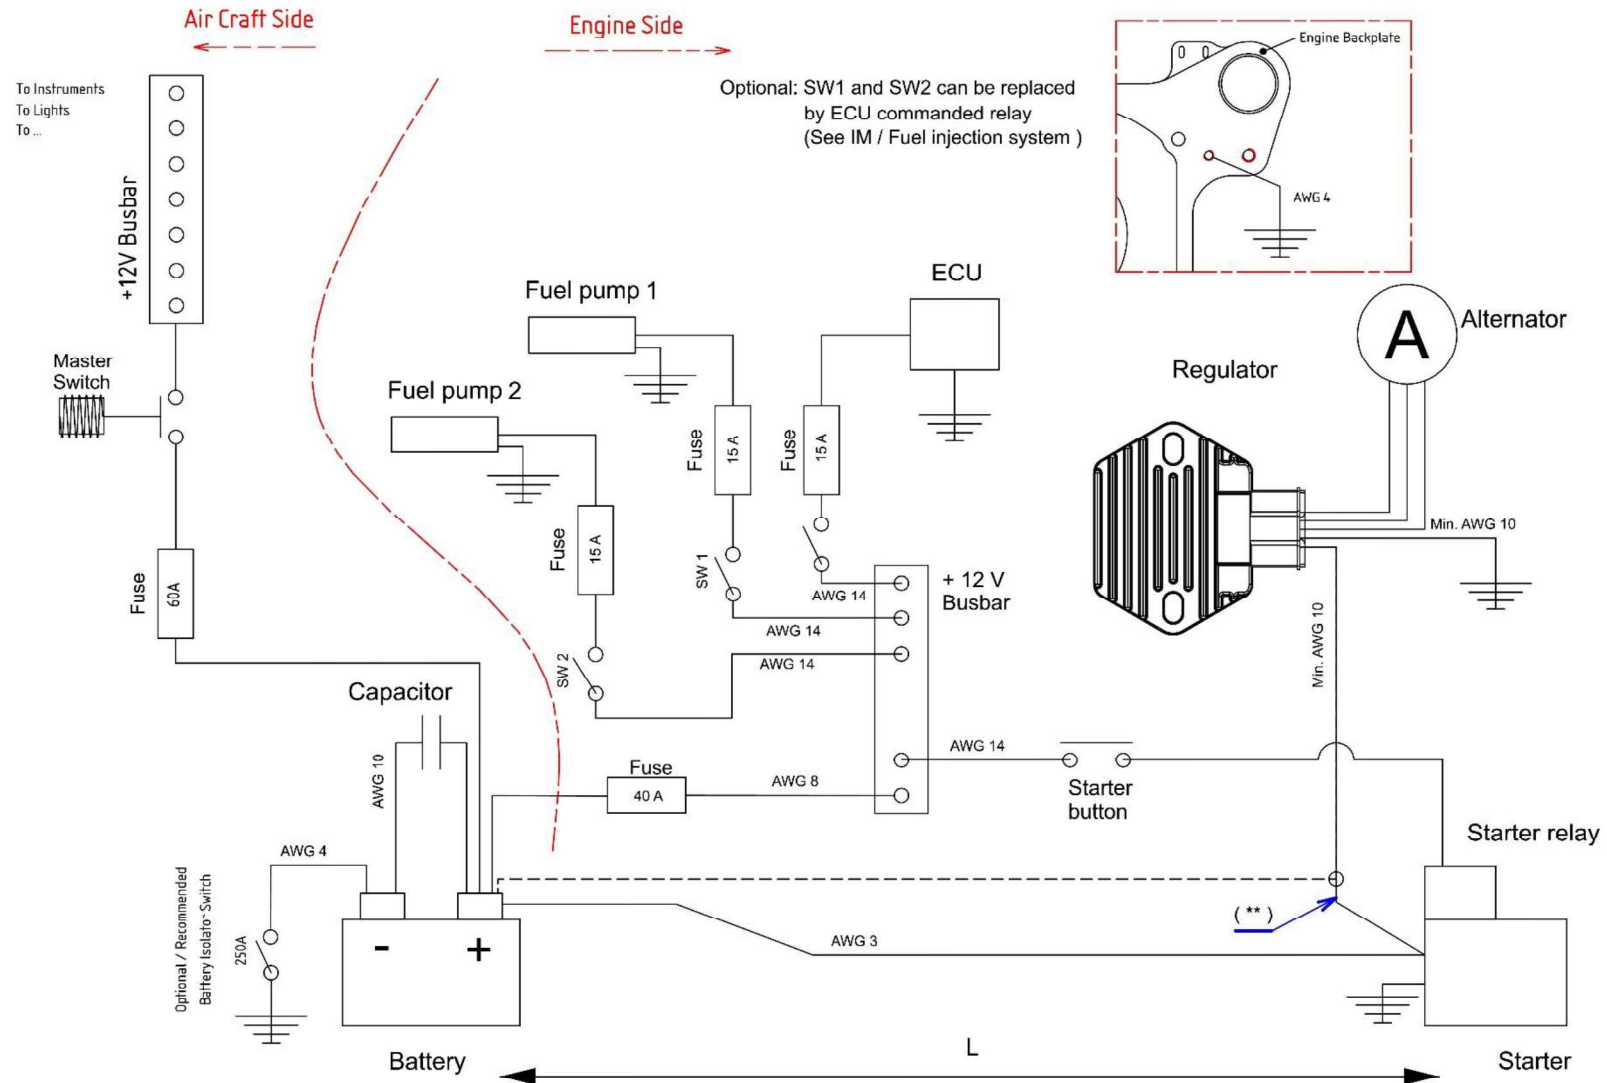

Optional: SW1 and SW2 can be replaced by ECU commanded relay (See IM / Fuel injection system)

(*): Engine close to battery (L < 1 meter)
Connect regulator + output directly to battery

(**): Engine far away from battery (for example battery in the back of the plane (L > 1 meter))
Connect regulator "+" output to the starter

