


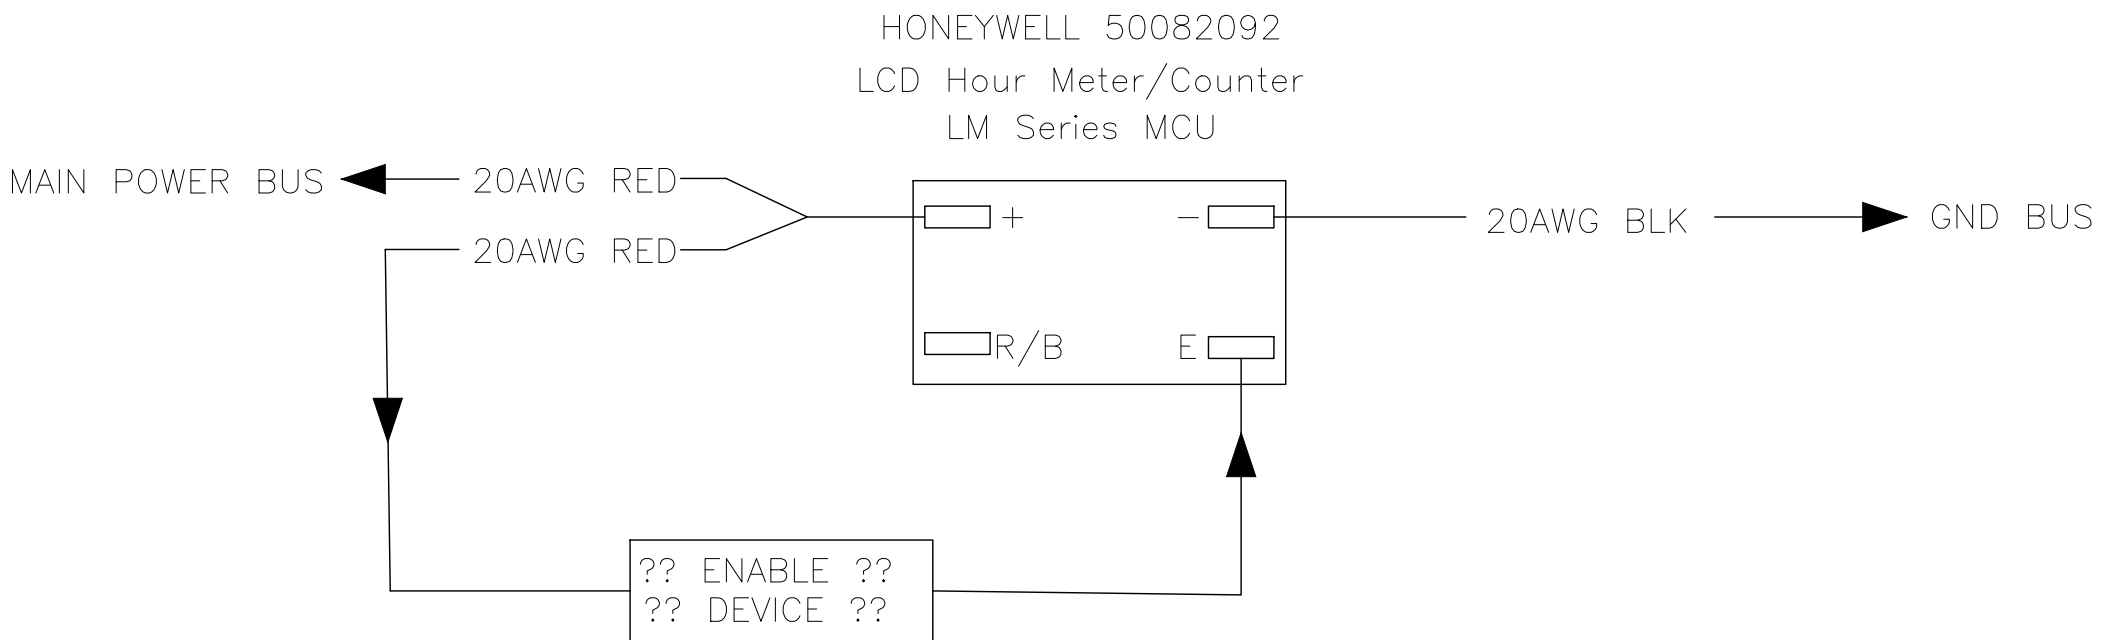

THIS DEVICE WILL ALLOW
POWER TO PASS WHEN
VOLTS ARE ABOVE BATT VOLTS.
i.e. ENGINE STARTED AND ALTERNATOR ON