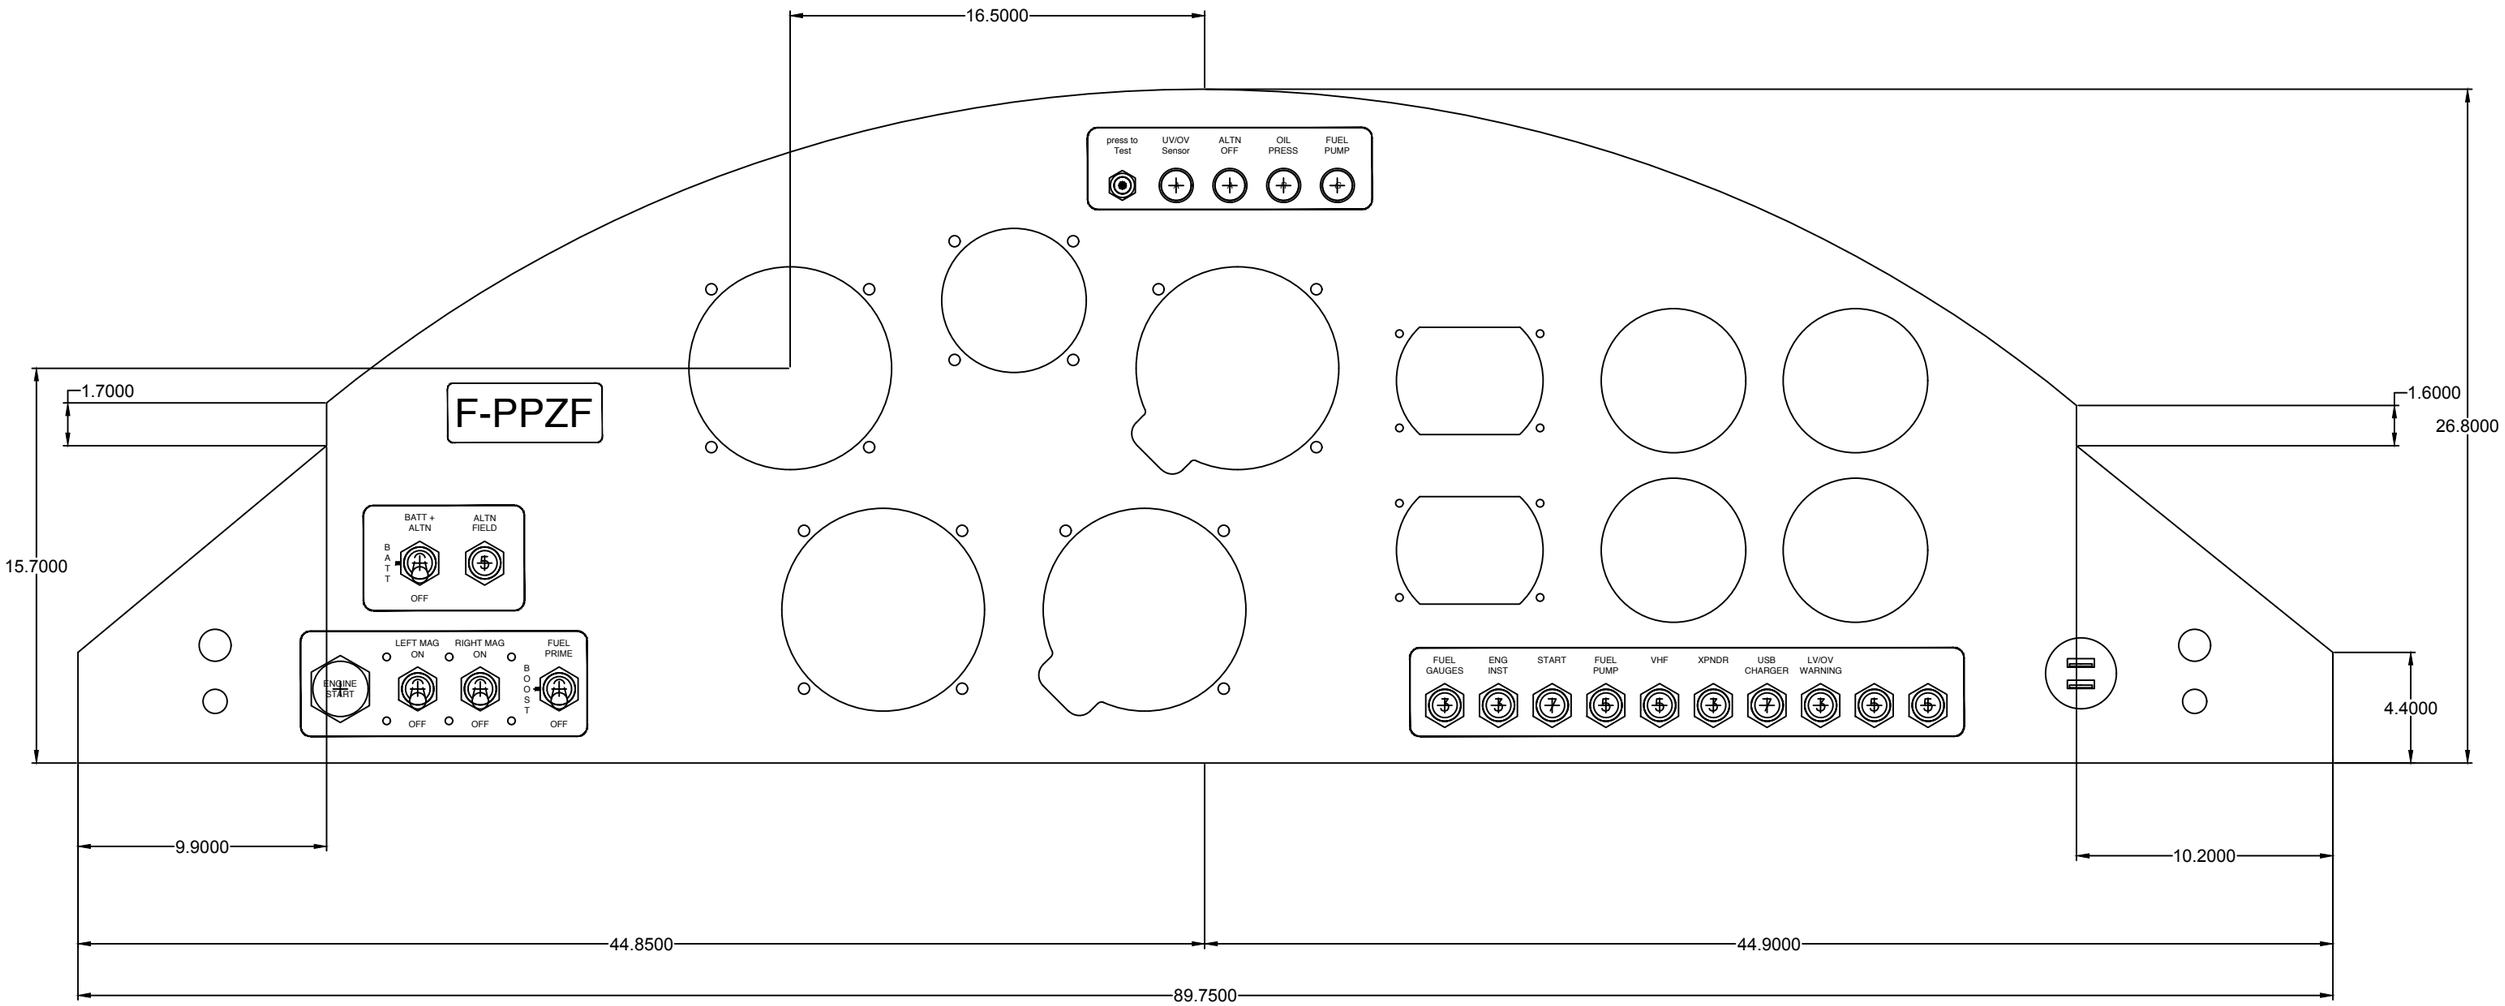
16.5000
press to Test
UV/OV Sensor
ALTN OFF
OIL PRESS
FUEL PUMP
1.7000
F-PPZF
1.6000
26.8000
15.7000
BATT + ALTN
ALTN FIELD
BATT
OFF
LEFT MAG ON
RIGHT MAG ON
FUEL PRIME
ENGINE START
BOOST
OFF
OFF
OFF
FUEL GAUGES
ENG INST
START
FUEL PUMP
VHF
XPNDR
USB CHARGER
LV/OV WARNING
4.4000
9.9000
10.2000
44.8500
44.9000
89.7500