
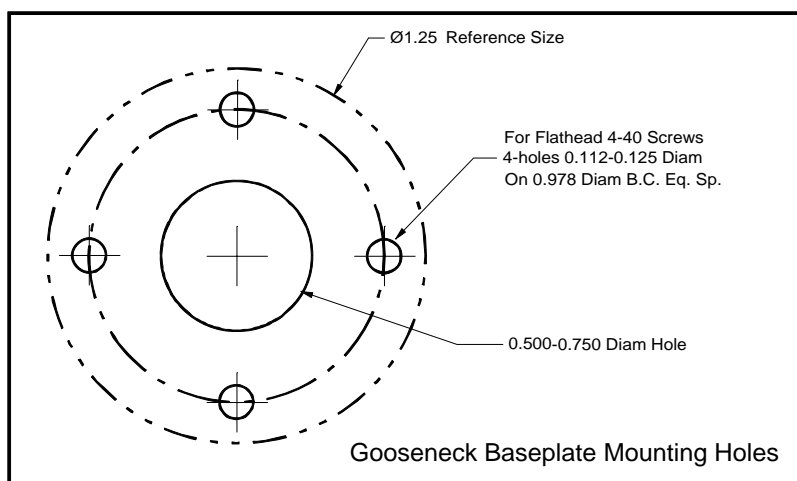


Eric M. Jones
113 Brentwood Drive
Southbridge MA 01550-2705
508-764-2072
emjones@charter.net

www.PerihelionDesign.com


Gooseneck LED---Puts a Rugged Little Light Anywhere

Instructions for installation:

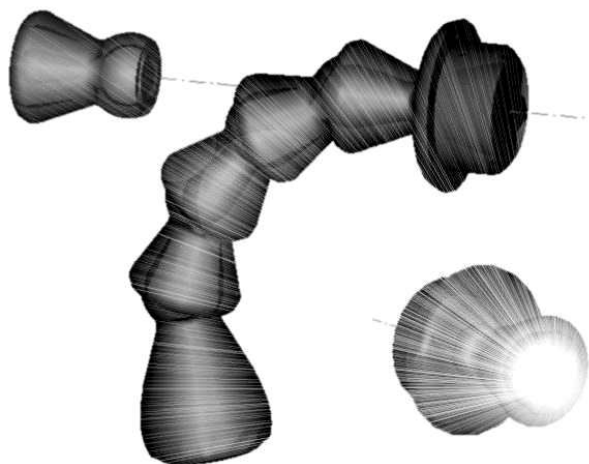

- 1) Locate the mounting position and configuration of the LED Gooseneck flex assembly.
- 2) Mark and drill four holes to mount the baseplate
- 3) Mark and drill the larger center hole.
- 4) Deburr carefully.
- 5) Add the 180 Ohm limiting resistors to the assembly.
- 6) Wire the Gooseneck Assembly to the aircraft.
- 7) Test

Perihelion Design can supply the Gooseneck LED in almost any color or combinations. The standard red-white is shown here.

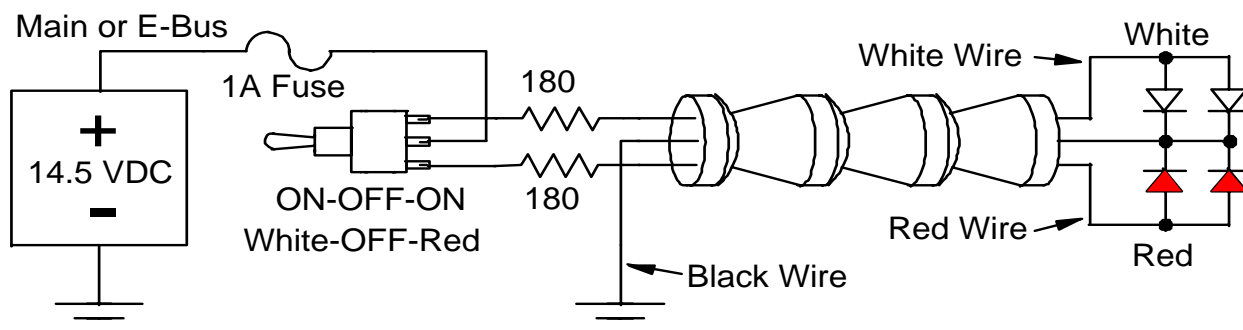

If you need help, please give us a call or email.