



2

START: DOWN THROUGH HOLE # 2 AND UP THRU # 1. WITH END OF CORD, TIE KNOT AT # 1, PULLING TIGHT. TRIM END TO 1".

THEN: DOWN AGAIN THRU # 1 AND UP AT # 2. PULL CORD THRU AND TUG KNOT INTO HOLE.

THEN: DOWN THRU # 3 AND UP AT # 2.

TIE KNOTS:

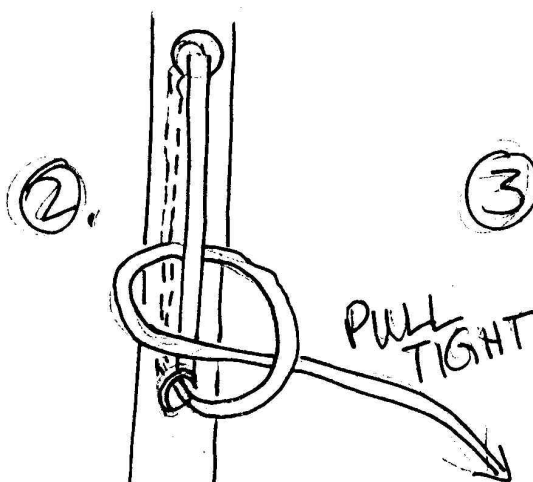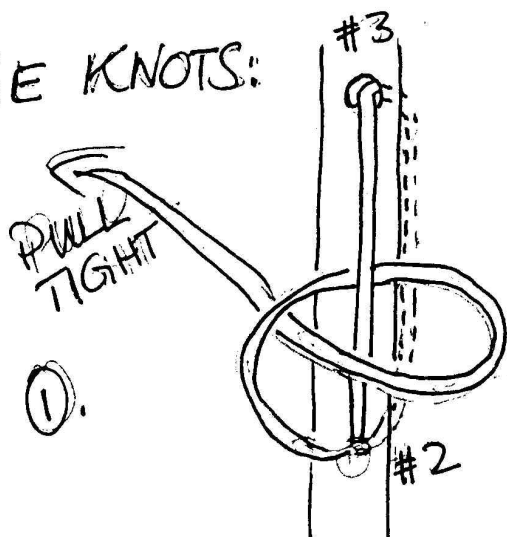

SAME AS
①.

THEN: DOWN THRU # 2, UP AT # 3, PULL KNOT DOWN THRU HOLE, if possible, it may need a bit of poking, and it's OK if it doesn't go all the way down, as long as it doesn't stick up too much.

THEN: DOWN THRU # 4, BACK UP AT # 3, TIE KNOTS AS AT # 2. CONTINUE TO END OF RIB.