

Instructions

1. Mark a square, 305x200 mm
2. Mark outer trapezoid, top 65mm from edges
3. Mark blue lines 8mm from edges of outside
4. Mark green lines relative to blue lines
5. Mark red lines and cut away (remove)
6. Fold on (1), iron
7. Fold on (2), iron, sew
8. Fold on (3) both, iron
9. Fold on (4) both, iron
10. Fold on (5) both, iron, sew
11. Fold on (6), tuck neatly, iron
12. Fold on (7), tuck neatly, iron, sew


All folds are up and towards you.

When sewing, sew *both* fold edges approximately 1-2mm from edges with a very small, tight stitch.


Sew the blue folds with the green folds all the way through the central trapezoid.

A nice touch is to trap a strip of soft leather in the (2) fold to form a thicker cuff around the top.

Eyelet placement

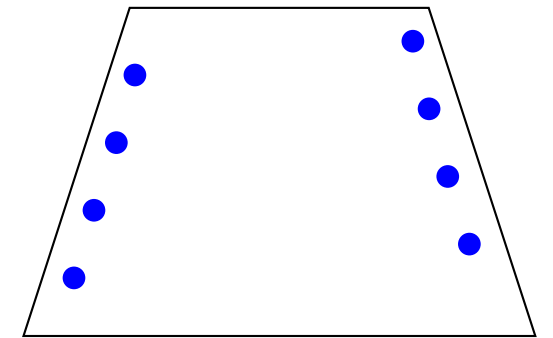

1. Note staggering
2. Edge of eyelet 5mm in
3. Leave room at bottom for rivets
4. All four boots are identical

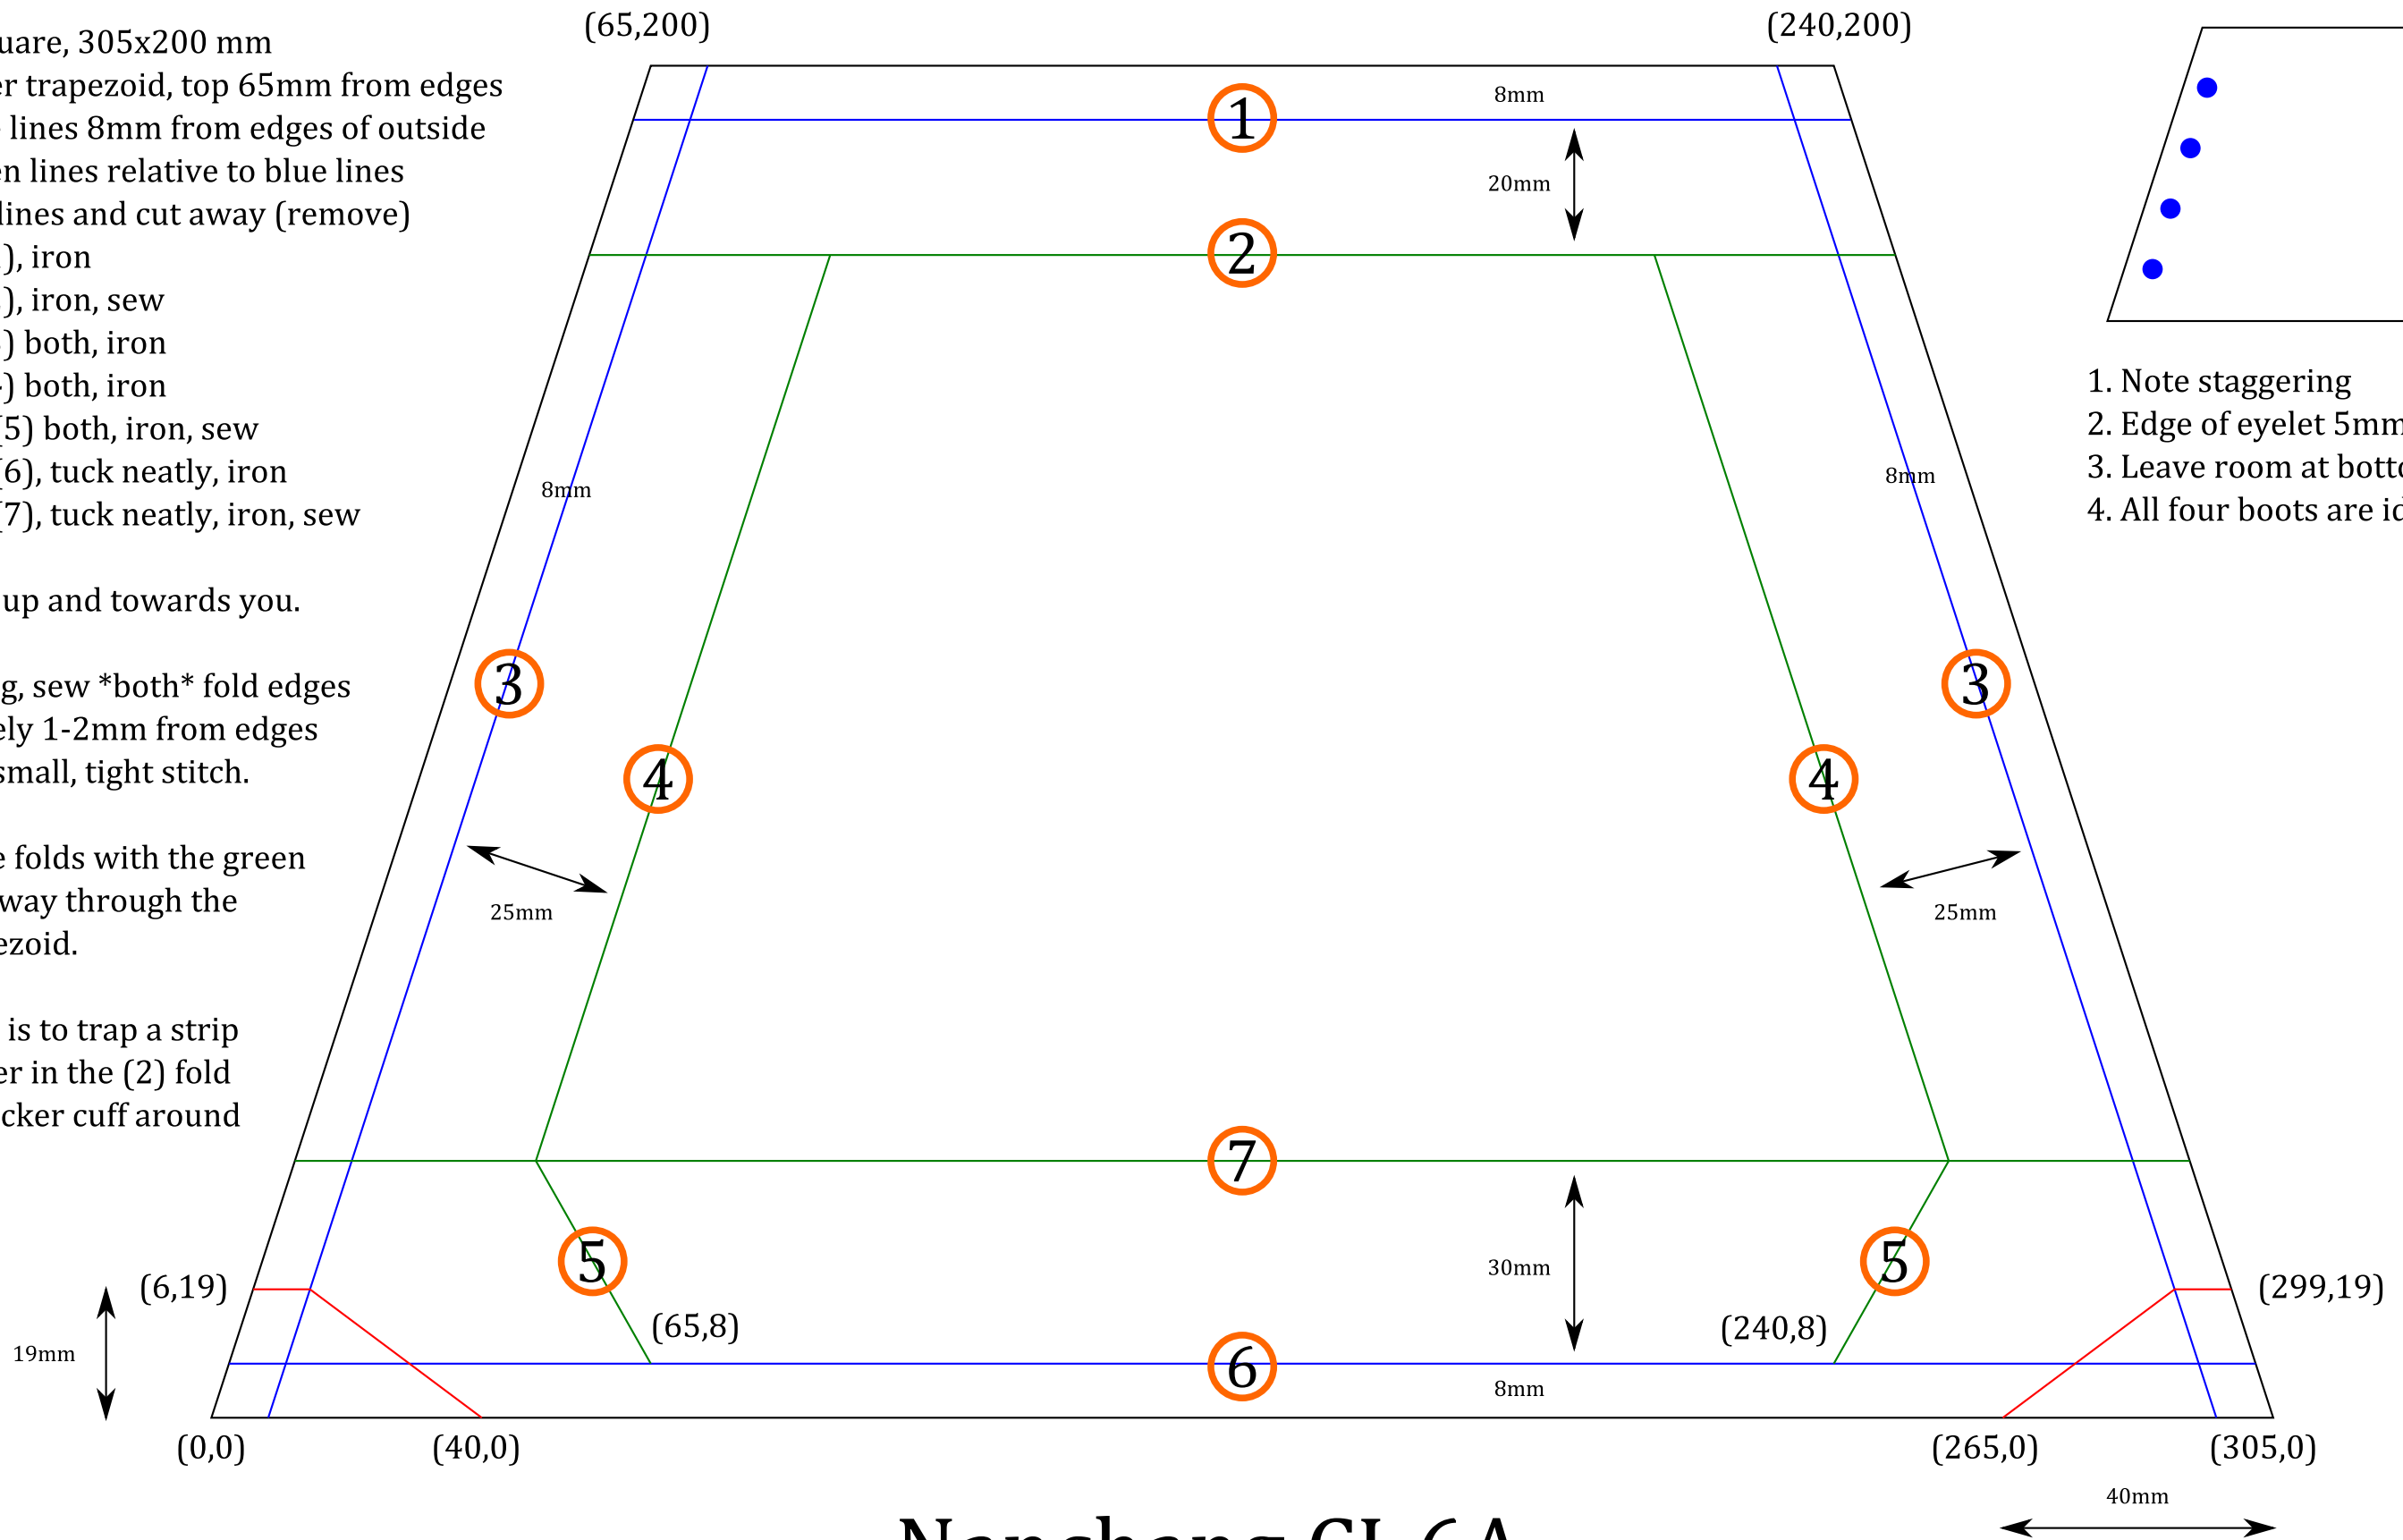

Nanchang CJ-6A Control Stick Boot