


AILERON DEFLECTION SEE 6-W-10

FLAP DEFLECTION


DOWN: Max 30°

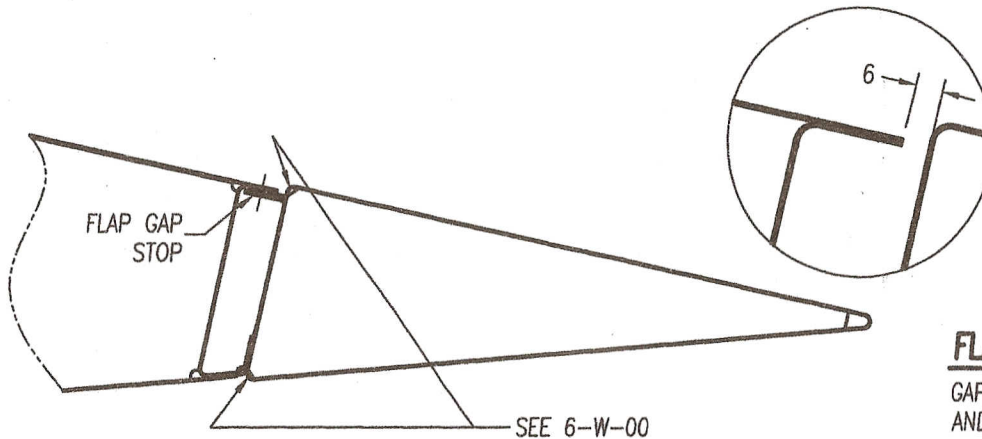


FLAP NEUTRAL

GAP BETWEEN AFT EDGE OF TOP SKIN
AND FRONT EDGE OF FLAP

IMPORTANT: FLAP LIMIT STOPS ARE SET WITH
POSITION OF MICRO SCRITCH ON FLAP ACTUATOR.
SWITCH

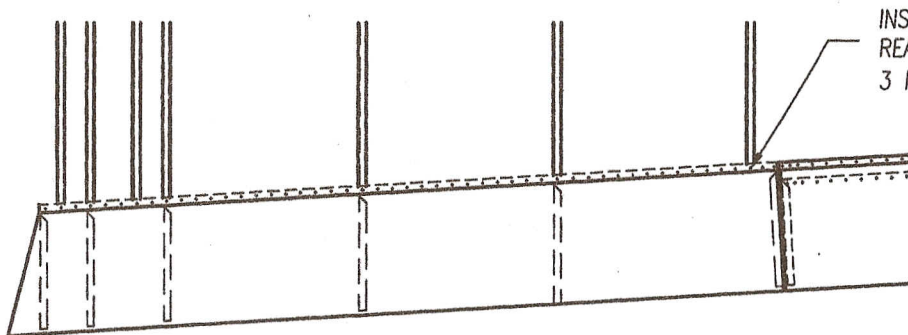

INSTALLED UNDERNEATH TOP FLANGE OF
REAR CHANNEL 6W7-1, THROUGH LAST
3 RIVETS O/B OF RR#7

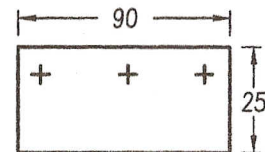

FLAP GAP STOP

PLASTIC BEARING MATERIAL $t=1/8"$ qty=2